


INSTALLATION INSTRUCTIONS

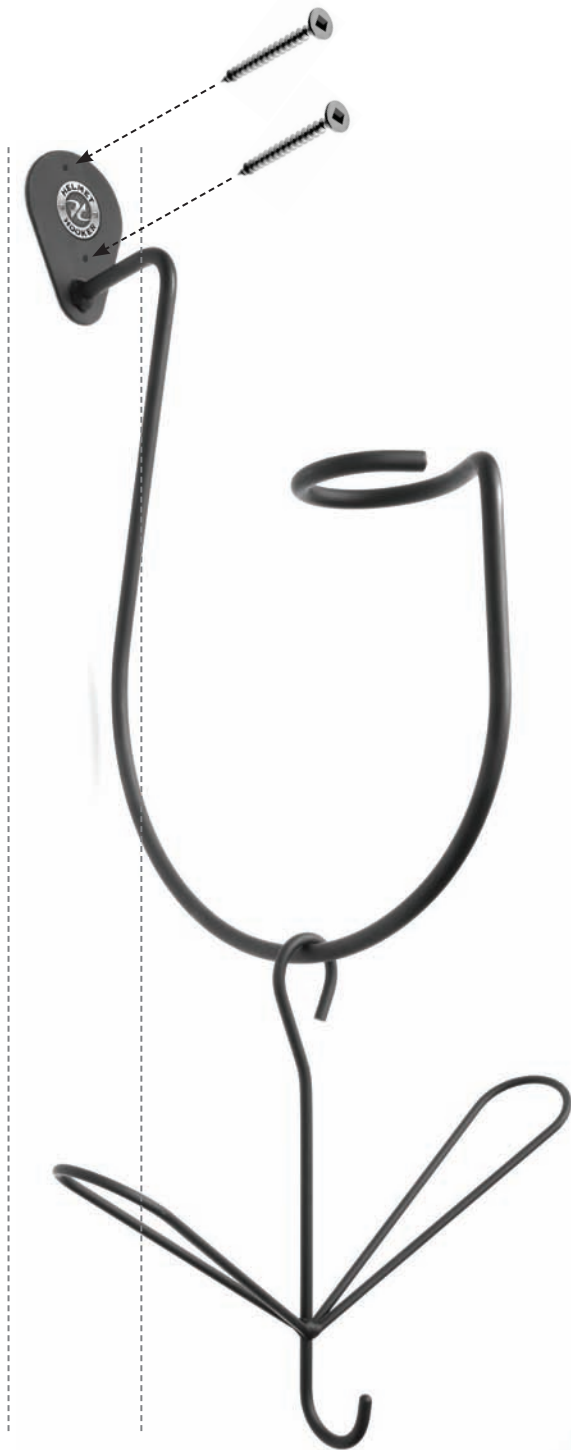

- 1 Locate stud behind drywall
- 2 Line up Helmet Hooker in desired location, and ensure the Hooker is level
- 3 Use provided screws to install directly into stud
- 4 Glove and key holder simply hooks onto bottom of Helmet Hooker

Special Note: If installing into drywall and not into stud, heavy-duty wall anchors **must** be used to ensure stability

www.helmethooker.com

HOOK IT DRY IT FIND IT USE IT

